INSTALLATION INSTRUCTIONS
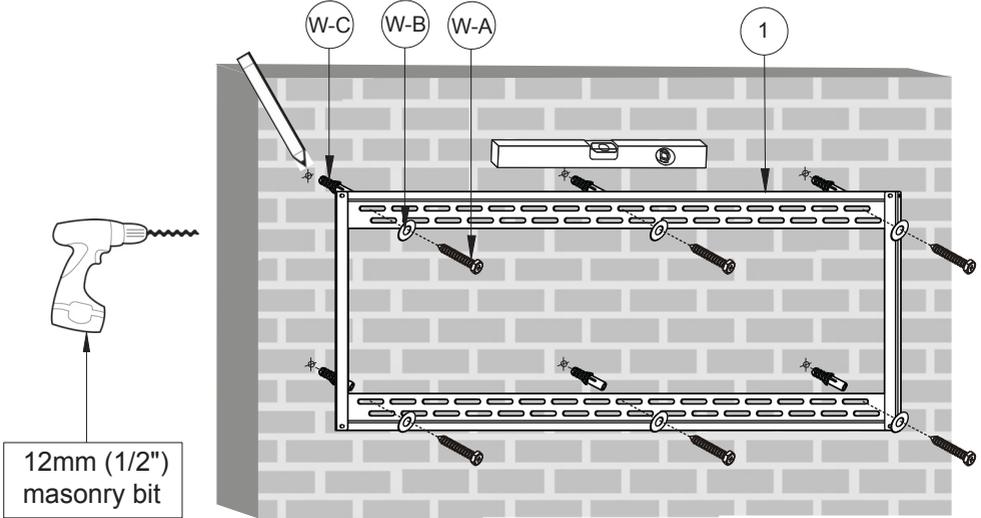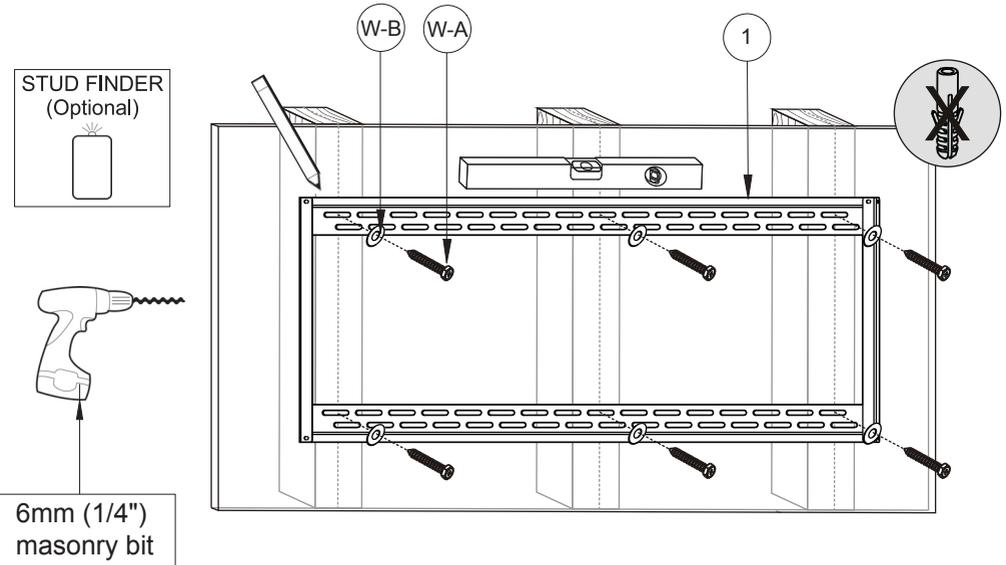
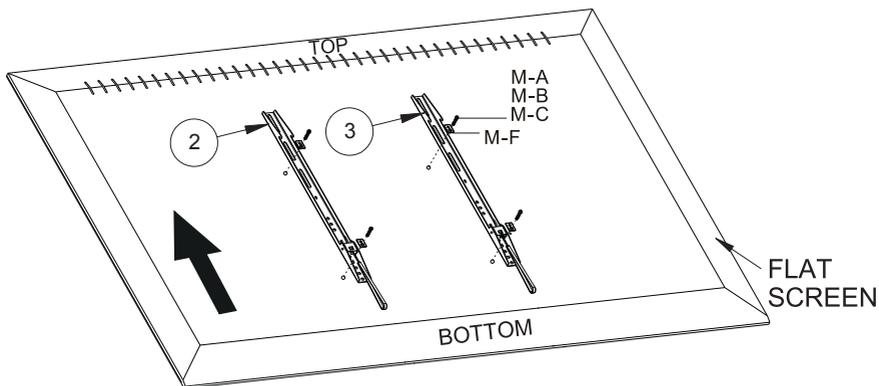**1** Fix wall plate to the wall using one of the following methods.
Use spirit level to help ensure a level wall plate

i. Concrete / brick walls.

12mm (1/2")
masonry bit

ii. Wood / stud walls.

STUD FINDER
(Optional)

6mm (1/4")
masonry bit

2 Attach the interface arms to the flat screen.
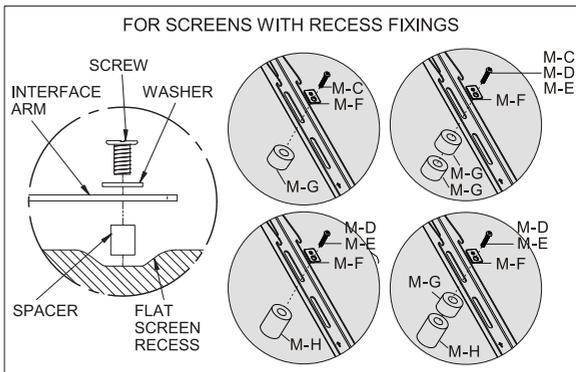
TOP

M-A
M-B
M-C
M-F

② ③

BOTTOM

FLAT SCREEN

Lay screen flat on the floor (use cloth to prevent scratches to screen). Align interface arms to fixing holes on rear of screen, choose the appropriate size and quantity screws (with multi-washer) according to the mounting holes on screen.
Always use top and bottom mounting holes. Ensure the same holes are used on both of the interface arms
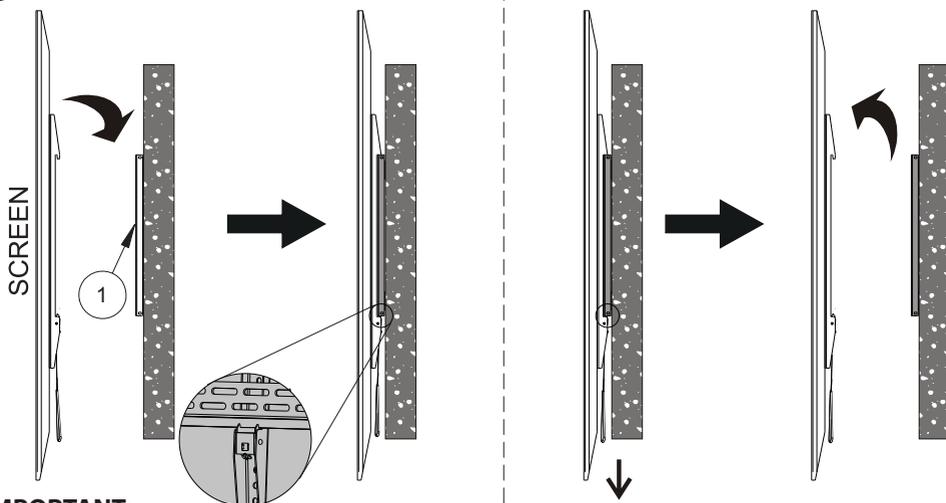Use spacers if screen is recessed.
Firmly fasten screws - **Do not overtighten** screws as this can damage screen.
Always consult the flat screen's user manual.

FOR SCREENS WITH RECESS FIXINGS

SCREW

INTERFACE ARM   WASHER

SPACER   FLAT SCREEN RECESS

M-C
M-C
M-F

M-G

M-C
M-D
M-E
M-F

M-G
M-G

M-D
M-E
M-F

M-G

M-H

M-D
M-E
M-F

M-G

M-H

3 Hook the screen with interface arms onto the mount

TO RELEASE SCREEN

SCREEN

①

IMPORTANT:
Safely hang screen onto wall bracket, this will require at least 2 people or mechanical lifting equipment.

Pull string to release interface arms from wall mount

B TECH
®

BETTER BY DESIGN™

www.btechavmounts.com

B-TECH AUDIO VIDEO MOUNTS

HEAD OFFICE
B-Tech International Limited
Bennett House, Long March, Daventry, Northants., NN11 4NR, UK
Email: info@btechavmounts.com

AMA-BT9901-V1-PROBX-0814-49